



MODEL# 2400D PAINT SHAKER INSTALLATION CHECKLIST

THE FOLLOWING ITEMS MUST BE COMPLETED FOR THE SHAKER TO RUN

- 1. Mount shaker firmly to bench or optional stand as per operating instructions. If using stand make sure stand is firmly mounted.
SHAKER WILL NOT RUN IF IT IS NOT MOUNTED FIRMLY
SHAKER MUST HAVE A CAN OF PAINT IN CLAMP.**
- 2. Check for minimum 100 PSI air pressure at air inlet 125 - 130 PSI BEST.**
- 3. Install Part# 2403 (Oilier), #2404 (Nipple) and #2401(Control Valve) per instructions.**
- 4. Fill oilier 3/4" below top of bowl with AIR TOOL OIL ONLY.**
- 5. Completely close oil adjusting screw in oilier (SEE INSTRUCTIONS).**
- 6. Open control valve to start, stop and adjust speed of shaker.**
- 7. Carefully follow oilier adjustment per instruction sheet.**

**FAILURE TO PROPERLY ADJUST OILIER WILL DAMAGE SHAKER
AND VOID WARRANTY.**